


Monteringsvejledning / Installation instructions
Skydoor -Type 1

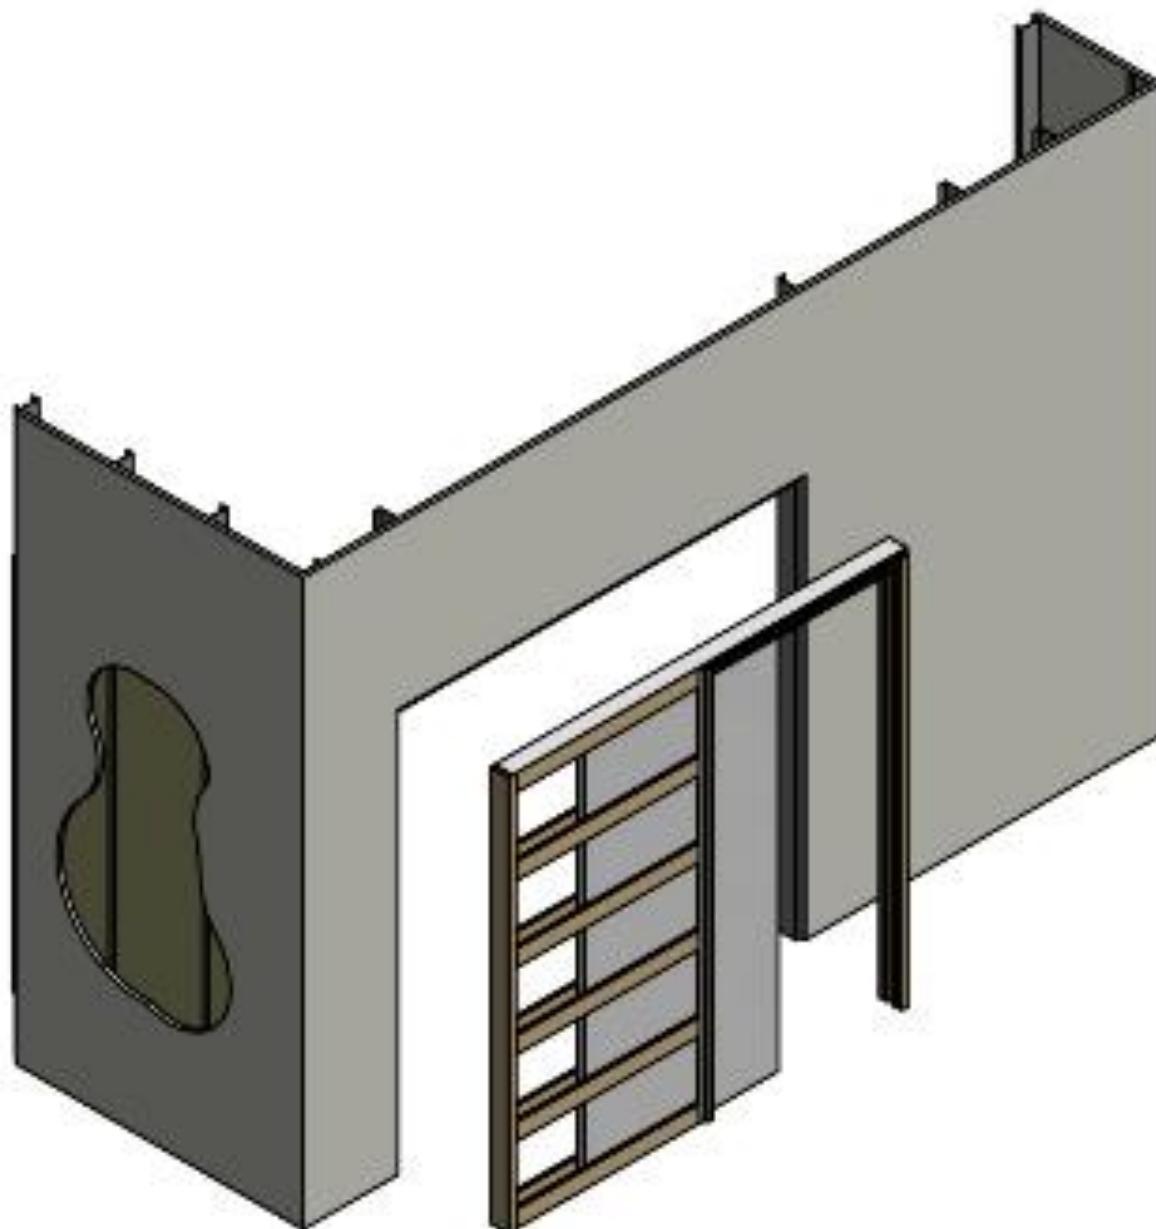

Monteringsvejledning / Installation instructions

Skydoor -Type 1



Monteringsvejledning – dansk

- ▷ Montering i gipsvægge sker ved forstærkning af stålskinne ved indlæg af lægter i skinne, hvori elementet fastgøres.
- ▷ Elementer fra 13M fastgøres med 1-2 skruer i midten af topskinne.
- ▷ Fjern transportbræt i bunden af elementet.
- ▷ Elementet bringes i lod og vater. Derefter fastgøres endekarmene med 3 stk. skruer/karmdyvler i hver stolpe.
- ▷ Dørpladen skydes frem i dørhullet og justeres i topbeslag således, at den kører og lander midt i falsen på karme og poste. Karme er monteret på bundstyr, som fastgøres i gulvet/underlaget.
- ▷ Gipsplader fastgøres på løsholte op mod karmen og føres ud over elementet. Skruelængde ved 1 lag gips: max. 25 mm.
- ▷ VIGTIGT: Gipspladen må IKKE have en krumning ind imod element.
- ▷ Indfatninger fastgøres med dykkere max. 35 mm. NB: Indfatning ved aftagelig topliste monteres min. 10 mm fra underkant, således at listen ikke fastsømmes, men stadig kan afmonteres.
- ▷ Undgå at søm/skruer går ind i dørpladen.
- ▷ LØBEVOGNE OG SKINNE MÅ IKKE SMØRES MED OLIE ELLER GLIDEMIDLER

Installation instruction - English

- ▷ Mounting in a drywall you need to strengthen the steel construction prior to install the Skydoor.
- ▷ Elements wider than 13M must be connected in the top with 1-2 screws.
- ▷ Remove the transport board in the bottom of the element.
- ▷ Level up the element and use 3 screws in each side of the frame
- ▷ Push the doorplate forward and adjust the doorplate so it runs perfect. The door frame must be connected to the floor.
- ▷ Make sure the plasterboard is correct connected to the horizontal profiles on the element If it only one layer of plaster board the max screw length is 25 mm.
- ▷ Important: The plasterboard is now straight, make sure to mount it correct.
- ▷ The profiles around the door it connects the nails max 35 mm and be aware not to nail the top profile in a way it can't be removed.
- ▷ Avoid nail and screws hits the doorplate.
- ▷ The carrier and profile must not be lubricated with oil etc.

